



Instructions

Type nr: 20241-26

1.

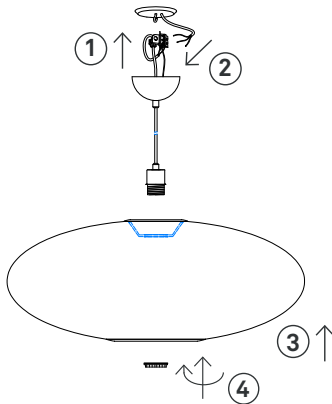

2.

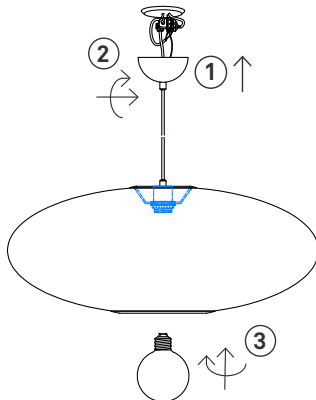

Contents

- A. Ceiling cup with cordset
- B. Shade

Not included with purchase

Light source E27 bulb, max 60W or 10W LED.

Remember to use a LED bulb. Led bulbs use up to 85% less electricity than a traditional light bulb.

Cleaning instructions

Product may be cleaned only after it has been switched off and cooled down.

Prevent moisture from getting to the lamp connections or power supplying elements.

Wipe the surface with a soft, dry sponge or cloth. We do not recommend cleaning agents as they can cause staining.

After cleaning, the lamp should be left off until it dries completely.