
INSTALLATION MANUAL 38225M, 38248M, 38250M $\mathbf{ecolight} \mid \Box \bigcirc \uparrow \mid \mathsf{Ceff} \lor \mathsf{ERE} \lor \mathfrak{S} \otimes \mathbb{Z} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \mid \mathsf{Ceff} \lor \mathsf{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes \mathbb{Z} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \mid \mathsf{Ceff} \lor \mathsf{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes \mathbb{Z} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \mid \mathsf{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes \mathbb{Z} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \mid \mathsf{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes \mathbb{Z} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \mid \mathsf{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes \mathbb{Z} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes \mathbb{Z} \otimes |\mathfrak{S}_{\mathsf{CRI}}^{\mathsf{SO}} \otimes |\mathfrak{S}_{\mathsf{CR}}^{\mathsf{SO}} \otimes |\mathfrak{S}_{\mathsf{C$ Ì **∩**~ 615mm Т Т 38225M: 230V | SMD 2835 | 25W | IP20 | Aluminium + plastic 130mm ⊃ <u>−</u> 27mm C 1170mm T 38248M: 230V | SMD 2835 | 48W | IP20 | Aluminium + plastic 130mm 1470mm T 38250M: 230V | SMD 2835 | 50W | IP20 | Aluminium + plastic 130mm <u></u> 27mm Complete with driver. В A b

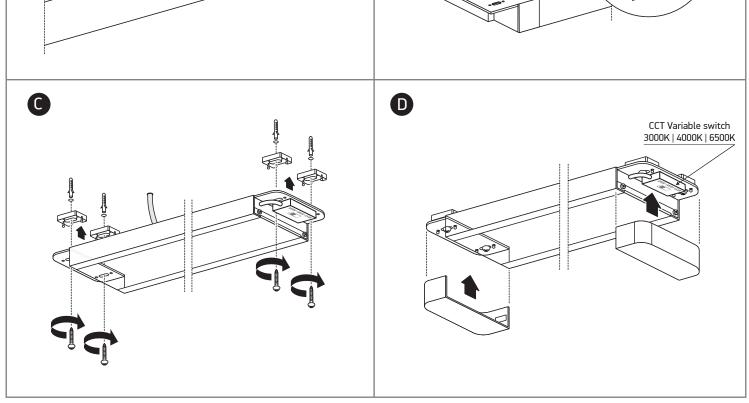

Warnings:

- 1. Make sure that the product is installed properly before connecting to electricity.
- 2. Do not cover the fitting.
- 3. Maintenance and installation should only be carried out by a professional electrician.